


INSTRUCTION *Deluxe Motorized Roller Shade*



Installation video

Components

- Mounting Tape
- Brackets 20" - 45" x2
46" - 58" x3
59" - 72" x4
- Cord (47 1/8") x1
- Plastic anchor screw length: 1 1/4" diameter: Ø 1/4"
- Screw length: 3/4" diameter: Ø 1/4" (suitable material: woods and plastic)

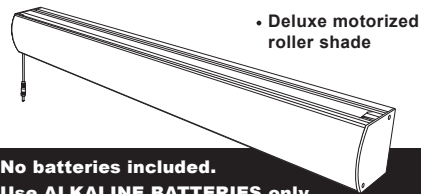

No batteries included.
Use **ALKALINE BATTERIES** only.

- Receiver case
- Receiver
- Remote case
- Remote control

1 Confirm the installation type :
Mount on the Wall or Ceiling.

Install the bracket at 3 3/8" from both side.

The proper position for installing the bracket.

Ceiling mount or Wall mount

2 Insert the long cord into the connector. (Optional)

3 Tilt the headrail slightly with 45 degree angle and push the headrail into the mount bracket.

4 Laminate the Mounting Tape behind the receiver box : tear the sticker and place to the proper position.

5 Connect the cord to the receiver.

6 Press the button on the receiver and wait till blinking. It will turn into operation mode when the light is on.

7 Press the down button, then the power is on. When the receiver and remote control are connected, the light will stop into either blue or red light.

▼ Notice :
When the indicating light is on with no reason means the batteries should be changed.

Finish and Check
Ready to operate when it connected.

▼ Remote control installation :
Screwed the case to install the remote control.